

Installation instruction single-handed lock-set


Required parts:

2 groundplates stainless steel
1 groundpart with notch
1 groundpart without notch
Cam
Slider
Slide bolt
Lock ring
Grip with square
Grip without square
Setscrew M5,M4
Groundplate nylon


Grease the sliders running surface




Insert the slider and the rounded bolt

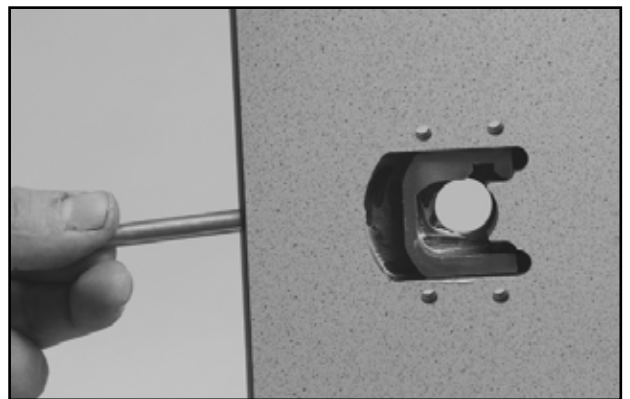

Fix the rounded bolt at the slider by lock ring

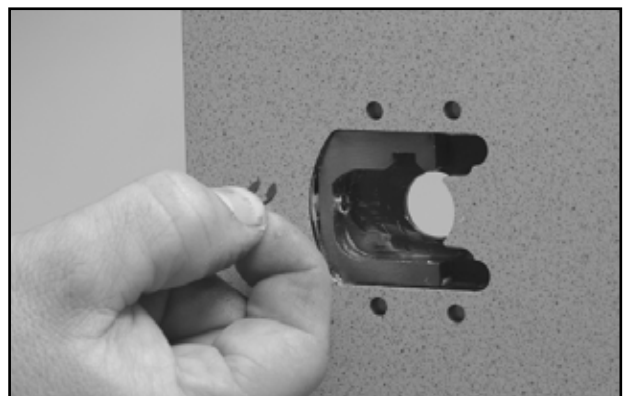

Insert the cam

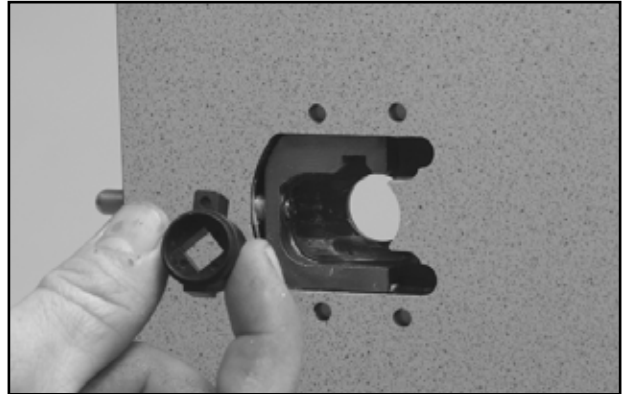

Assemble groundplate with small notch (for red/white outside), stainless steel plate and screw


Fit it on the side that is provided for red/white indicator.
Ensure that the notch points downward.



Fit the second ground part with the stainless-steel groundplate on the notch duct at other side.
Then fix it with 4mm screws at opposite side.



Srewed groundparts.

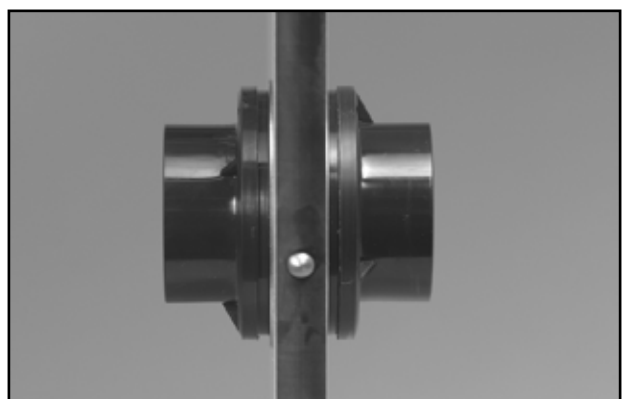

Insert handle with square at the inside of the door.
Fix it on the groundpart by light pressure.



Fit red/white indicator on the square at 11 o'clock position with the door opened (latch slid-in).
Fix the red/white ground part with setscrew M5 (allen key 4) on the square.



Finally grease the turning rosette at the running surface, press it on the groundpart and fix it with a set screw on bottom side.



